

Operation Instructions

M-288 Non-contact Switch For Special Room





1 Safety instructions

! This device must use a low voltage with protected safety Insulation, all commissioning and repair work must be installed by a professional engineering installer.


2 Application & Characteristics

- This product is mainly used for operating room.
- Large switch panel with contactless induction control, adopt laser carving technology, exquisite and high-grade.
- Equipped with clear voice prompt function.
- Both the inner and outer panels have text and light instructions, and the panels clearly identify the use steps for easy operation.


3 Product overview

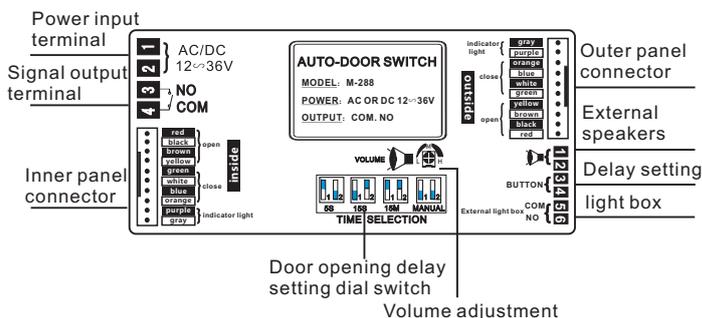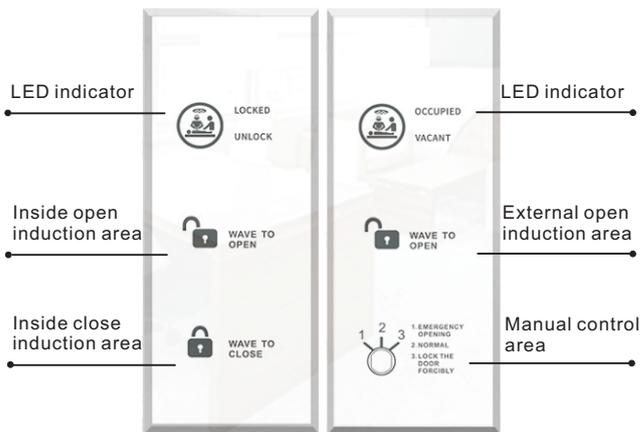

4 Installation size drawing

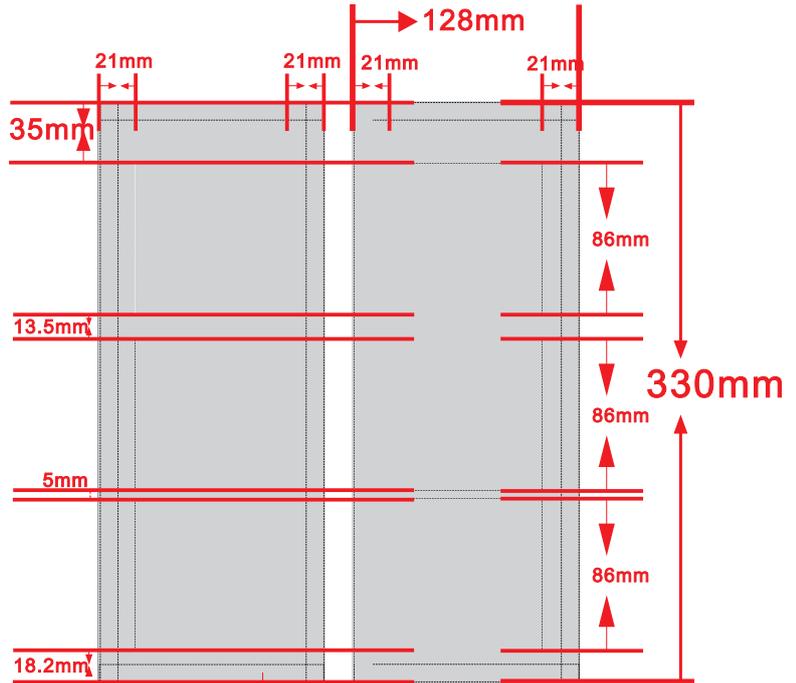

5 Inner & outer panel wiring diagram

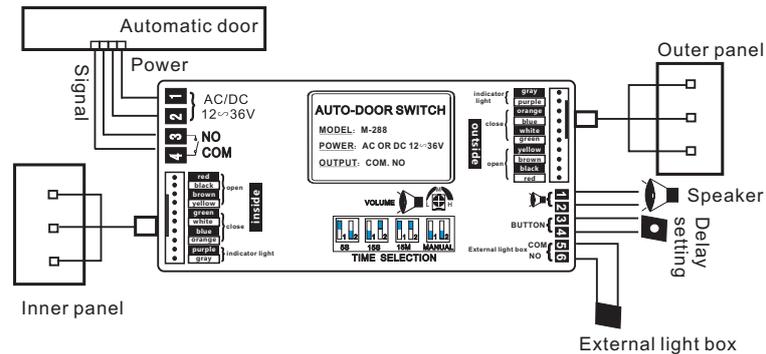

1. Take the 12-36V power from the automatic door to the controller and connect the signal output to the automatic door signal terminal.
2. The inner and outer panel wiring are the same.
Red, black, brown, yellow => Door opening sensing touch switch
Green, white, blue, orange => Door closing sensing touch switch
Purple, grey => LED indicator
3. External speaker: 4-8Ω, 1-5W speaker.
4. External light box: When the system is in use state, it outputs a relay short connection signal, which can be used as a signal light box to control external connection.


6 Door opening delay setting dial switch

After the automatic door is opened, the delay time of closing back can be realized by toggle the dial code switch

[1] As picture shows, adjust volume by volume adjustment knob, clockwise adjust for high volume, counterclockwise to adjust for low volume.

[2] Door opening delay setting dial switch


ON	5S	15S	15M	manual
TIME	5S	15S	15M	manual

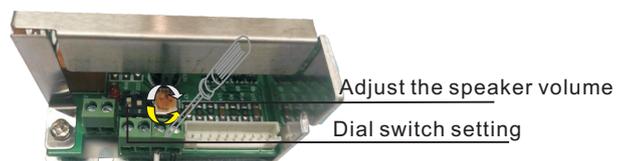


Adjust the speaker volume

Dial switch setting


7 Using process

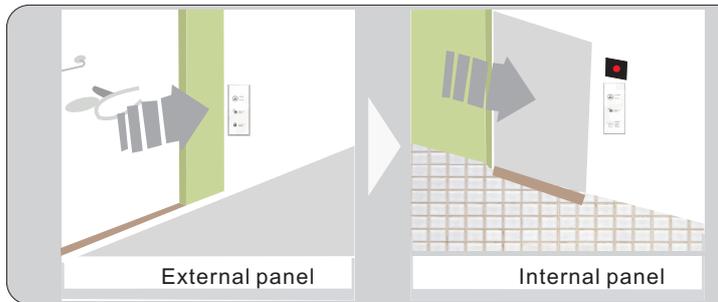

[1] On standby state, the outer panel "vacant" indicator light on, the inner panel "unlock" indicator light on.

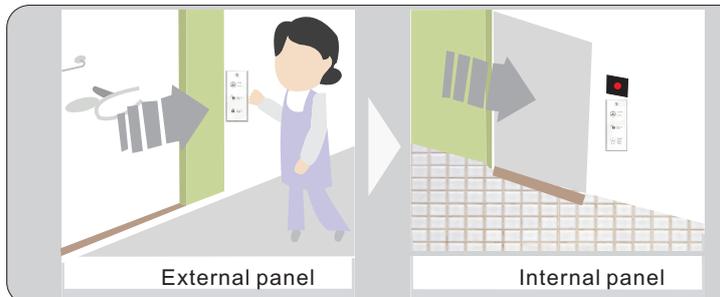


[2] Wave hands to the external open induction area on the outer panel, and the automatic door open. At the same time, there is a voice prompt "door is opening".

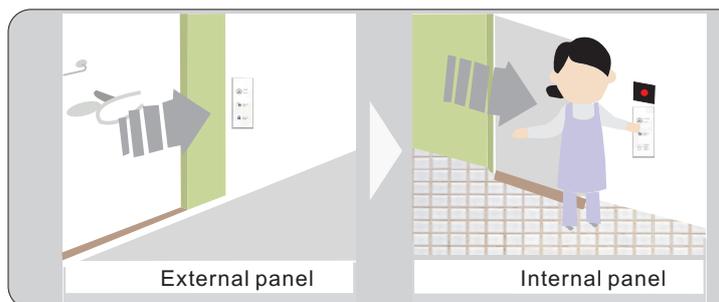

[3] After entering the room, wave hands to the Inside close induction area, the door automatically close and lock. At the same time, there will be a voice prompt "door is closing". If not hand wave to close the door for more than five seconds, there will be a voice prompt "Enter the room, please wave your hand and lock the door".

[4] After door is locked, the "OCCUPIED" indicator light on the outer panel is on, and the "LOCKED" indicator light on the inner panel is on. At this time, if someone wave hands to the door open or close induction area on the outer panel, will issue a "occupied" voice prompt and the door will not be opened.

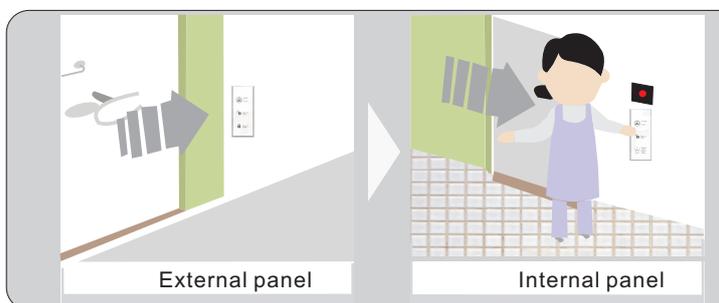


[5] When the people inside need go out, wave hands to door open induction area, the door will open automatically and there will be a voice prompt "door is opening".

[6] When people come out, the automatic door will be closed automatically according to the setting time of the dial switch or wave hands to door close induction area, the automatic door will be closed immediately. At the same time, there will be a voice prompt "door is closing" and the system will return to the standby mode.

8 Manual operation by key


Emergency opening

When the series is in the state of "OCCUPIED" and the personnel inside have to forcibly unlock and open the door due to an accident or special circumstances, please use key to switch to function "1, emergency opening", the automatic door will be forcibly opened, and in this state, all the induction areas of the outer and inner panel are invalid, and then use key to switch to function "2, normal", the system will return to the standby state.

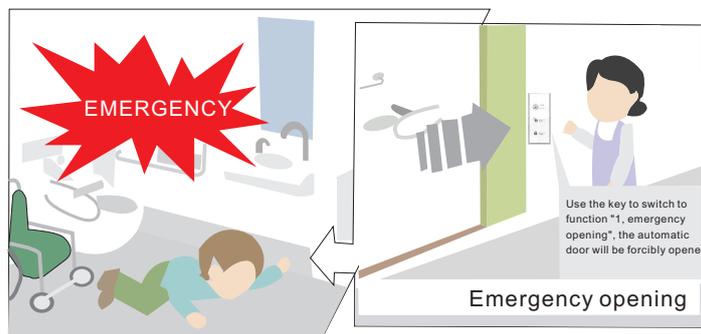


Emergency lock

When the automatic door needs to be suspended, please use the key to switch to function "3. Lock the door forcibly", the automatic door will be forcibly locked. In this state, all the induction areas of the outer and inner panel are invalid. and then use the key to switch to function "2. Normal", the system returns to the standby state.

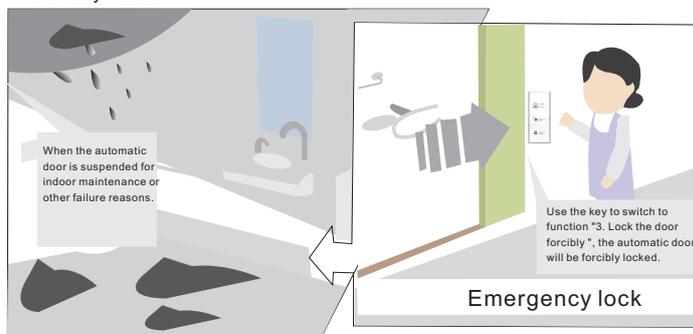

9 Induction sensitivity setting

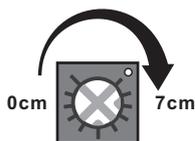

Adjust clockwise, the induction distance becomes farther, adjust counterclockwise, the induction distance becomes closer, and the maximum induction distance is 7cm.

Note: This adjustment knob is on the back of the panel.

10 Technical parameters

Working voltage	AC/DC 12~36V
Standby current	110mA (12V power)
Action current	135mA (12V power)
Voice	Chinese
Output	Relay dry contact
Speakers	External speaker
Light box	Yes, connect with external indicating light box
Closing delay	5S、15S、15M、Manually
Induction distance	0-7cm
Inner panel size	330mm(L)×128mm(W)×15mm(H)
Outer panel size	330mm(L)×128mm(W)×15mm(H)
Main controller size	145mm(L)×57mm(W)×38mm(H)